



Inputs

Outputs

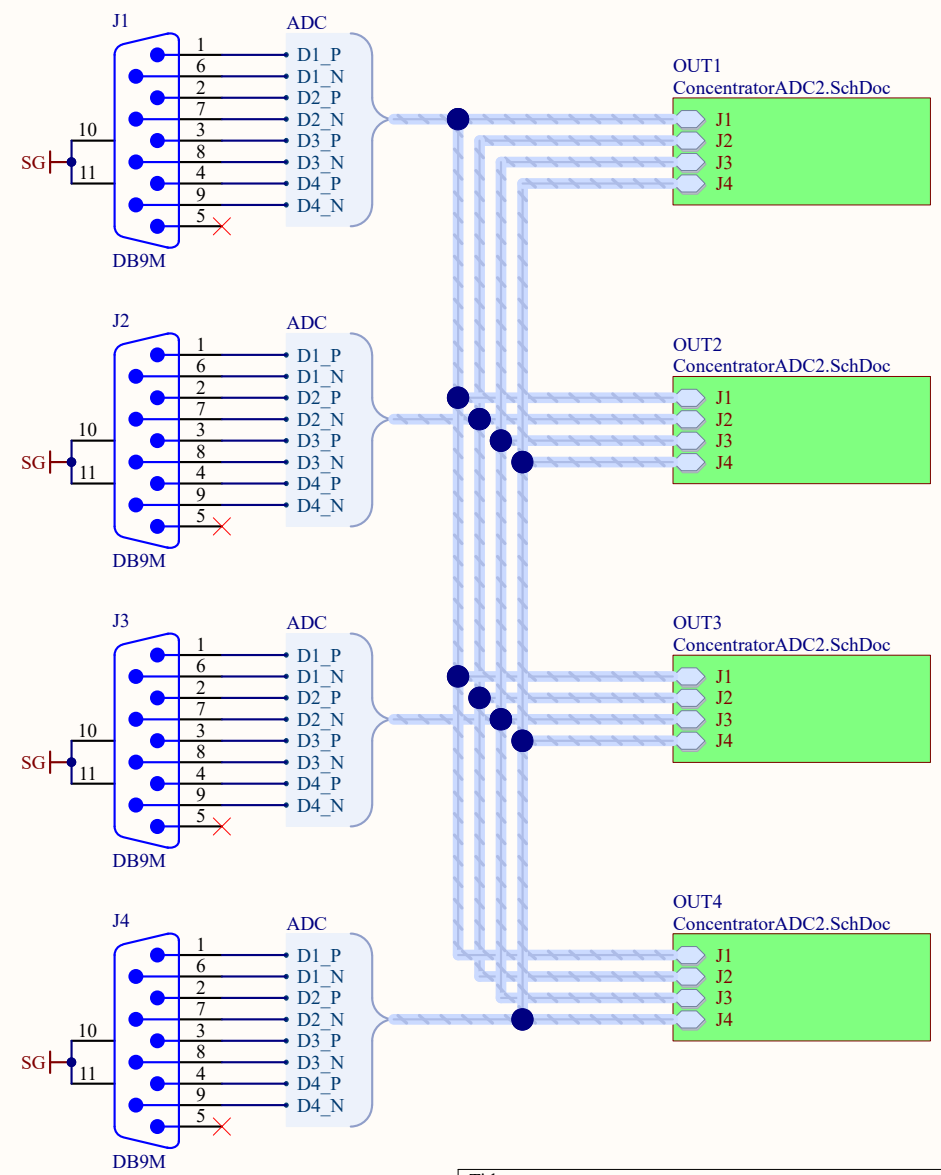

- | | | |
|-------------------------|---------------|--------------------|
| H1 #4 screw, 3/8" | B1 Bracket SG | H13 #4 screw, 3/8" |
| H2 #4 screw, 3/8" | | H14 #4 screw, 3/8" |
| McMaster-Carr 90272A108 | B2 Bracket SG | H15 #4 lock washer |
| H3 #4 lock washer | | H16 #4 lock washer |
| H4 #4 lock washer | | H17 #4 nut |
| McMaster-Carr 91113A005 | B3 Bracket SG | H18 #4 nut |
| H5 #4 nut | | H19 #4 screw, 3/8" |
| H6 #4 nut | | H20 #4 screw, 3/8" |
| McMaster-Carr 90480A005 | B4 Bracket SG | H21 #4 lock washer |
| H7 #4 screw, 3/8" | | H22 #4 lock washer |
| H8 #4 screw, 3/8" | | H23 #4 nut |
| | B5 Bracket SG | H24 #4 nut |
| H9 #4 lock washer | | H25 #4 screw, 3/8" |
| H10 #4 lock washer | | H26 #4 screw, 3/8" |
| | | H27 #4 lock washer |
| H11 #4 nut | | H28 #4 lock washer |
| H12 #4 nut | | H29 #4 nut |
| | | H30 #4 nut |

| | | |
|---|--------------------------------------|-----------------------|
| Title | | |
| Controls Concentrator ADC channels | | |
| Size | Number | Revision |
| A | D1700379 | 1 |
| Date: | 8/20/2017 | Sheet 1 of 2 |
| File: | C:\Users\...\ConcentratorADC1.SchDoc | Drawn By: Daniel Sigg |

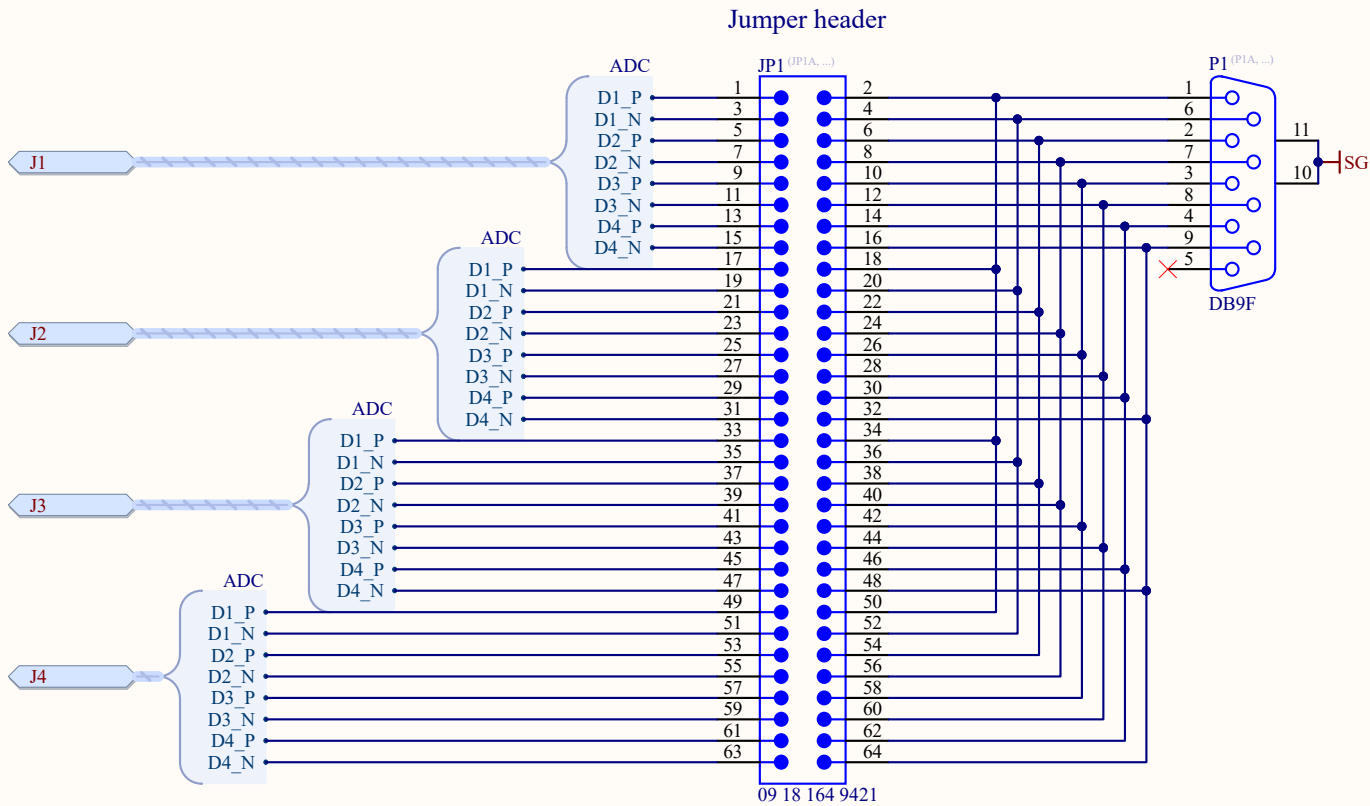

Use jumper on headers JP1X to select the D-sub cross connect.
Or, omit headers JP1X and use solder jumpers.

JP1B (P1BA,...) Header

| | | | | | |
|-------|--------------------------------------|-----------------------|---|--|--|
| Title | | | Controls Concentrator ADC channels | | |
| Size | Number | Revision | | | |
| A | D1700379 | 1 | | | |
| Date: | 8/20/2017 | Sheet 2 of 2 | | | |
| File: | C:\Users\...\ConcentratorADC2.SchDoc | Drawn By: Daniel Sigg | | | |