

	DCC Number: E080063-00-X
	Date Prepared: 1-31-08

Originator	Cognizant Engineer	Ext./Phone#	Project	Account Number
Michael Fyffe	R. Wooley	225 686-3118	ELIGO	

Dwg/Part Number	Rev	Part Description / Material	Serial Number	Qty
	00	Viewport		7

Used In (next higher assembly): eLIGO

Vendor Name	PO/Contract Number

Data Package, Receiving/Inspection Remarks:

Inspection Required Y/N	Visual Damage Y/N	Comments	Name/ Initials	Date Comp.
Y		Visually inspect per E990190-01-D		

Process Flow:

#	Operation	Start Date	Work Area	Instructions	Name/ Initials	Date Comp.
1	Clean			Per E990190-01-D	T.E.	2-1-08
2	Vacuum Bake			Per E990190-01-D 200 C for 48 hrs.	T.E.	2-6-08
3	Wrap & Tag vacuum clean parts			Per E990190-01- Cover the glass surfaces with Lenx 90 lens tissue and wrap the part with UHV quality aluminum foil	T.E.	2-8-08

N.B.: A copy of this traveller must be submitted to the DCC each time the original is shipped with the associated part(s) and when the traveller has been completed.


#	Operation	Start Date	Work Area	Instructions	Name/ Initials	Date Comp.
5	Ship and Deliver/File paperwork			Please send to: Store all parts in the IO section of the clean LLO optics lab. File one copy of traveler with the DCC. Note: Ship original traveler with these parts.	BO'R	4-22-08
END: Go to Traveler or procedure associated with next higher assembly processing						

Special Instructions (Handling/Packaging Constraints, Remarks, etc.) or Notes:


RGA Scan was 6 feb 08 approved by BO'R

N.B.: A copy of this traveller must be submitted to the DCC each time the original is shipped with the associated part(s) and when the traveller has been completed.


Load 6feb08

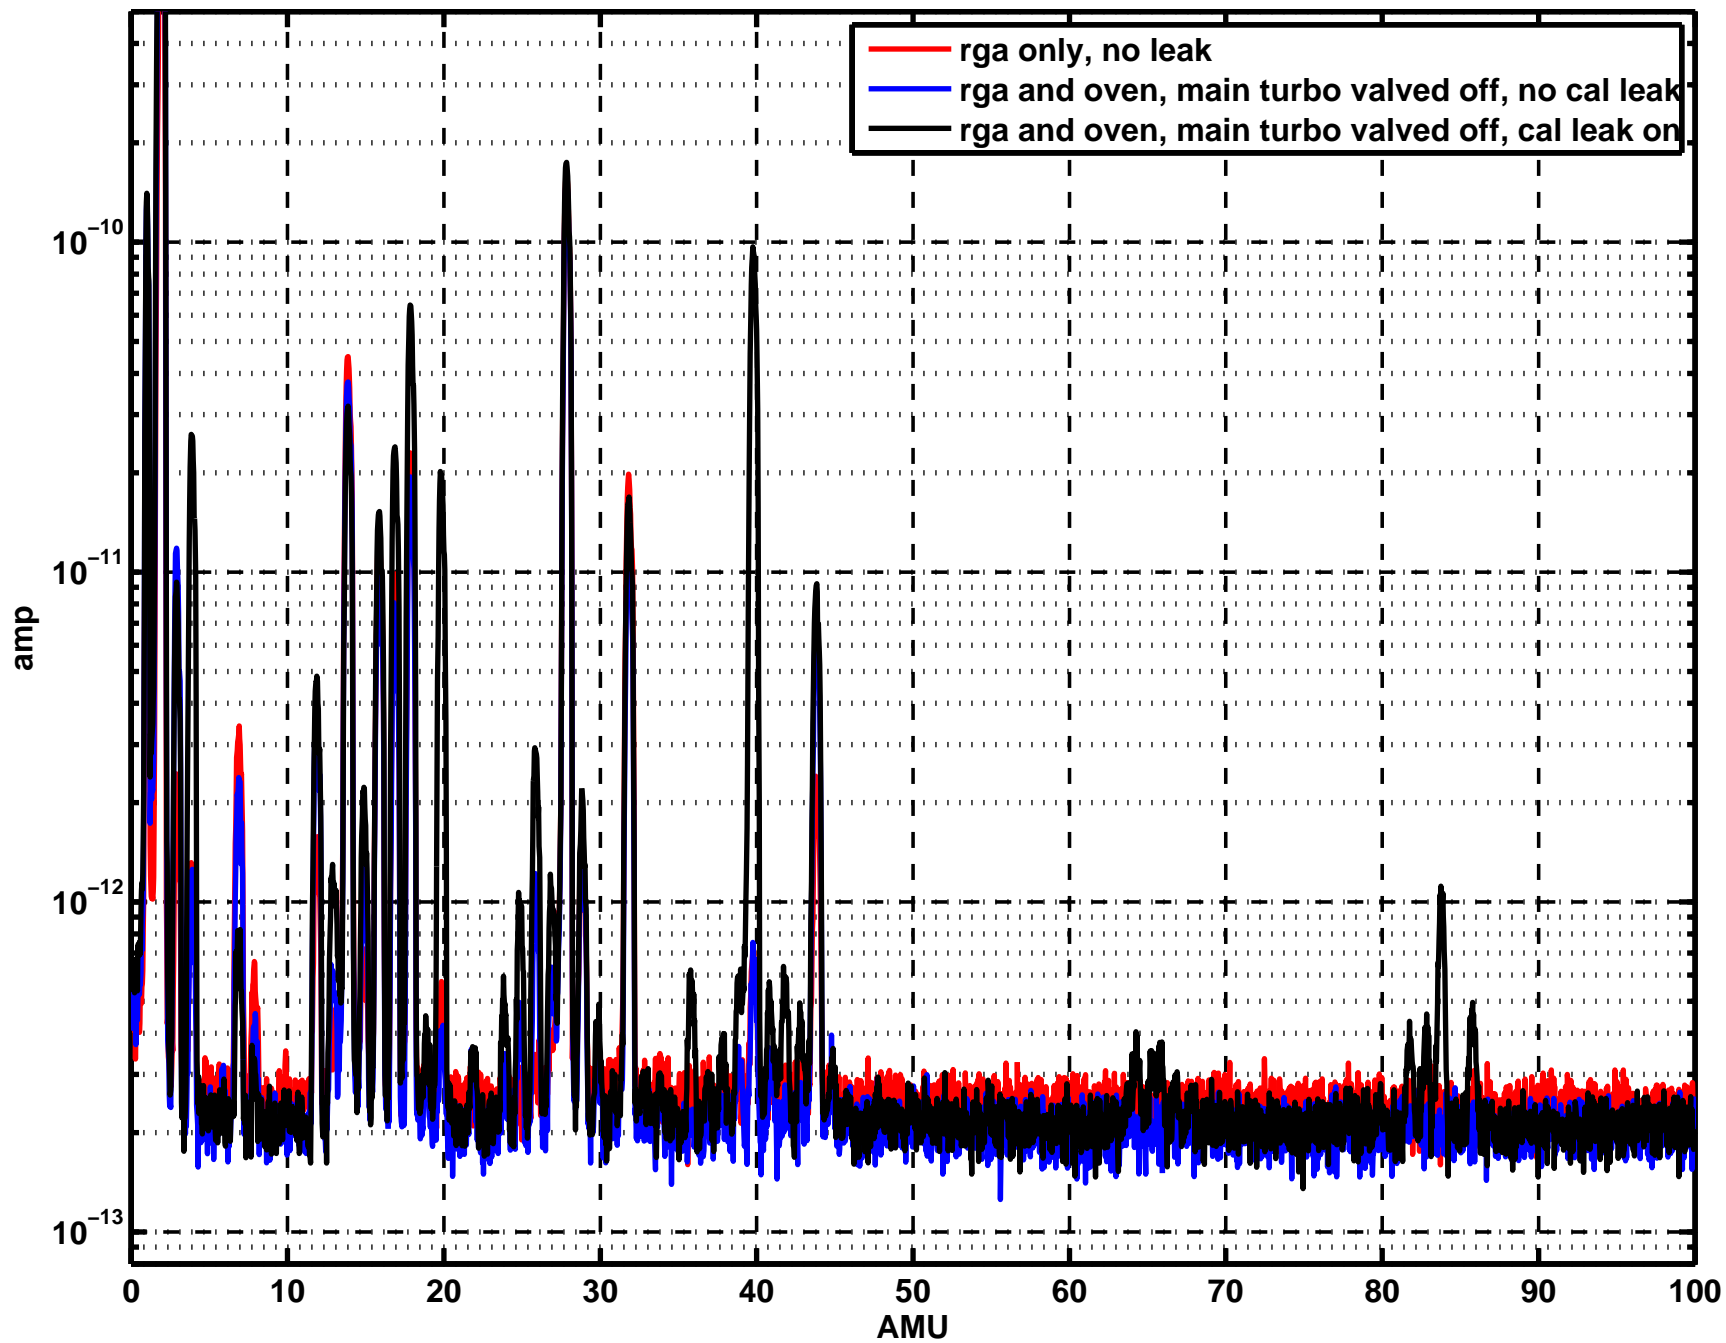

RGA Only

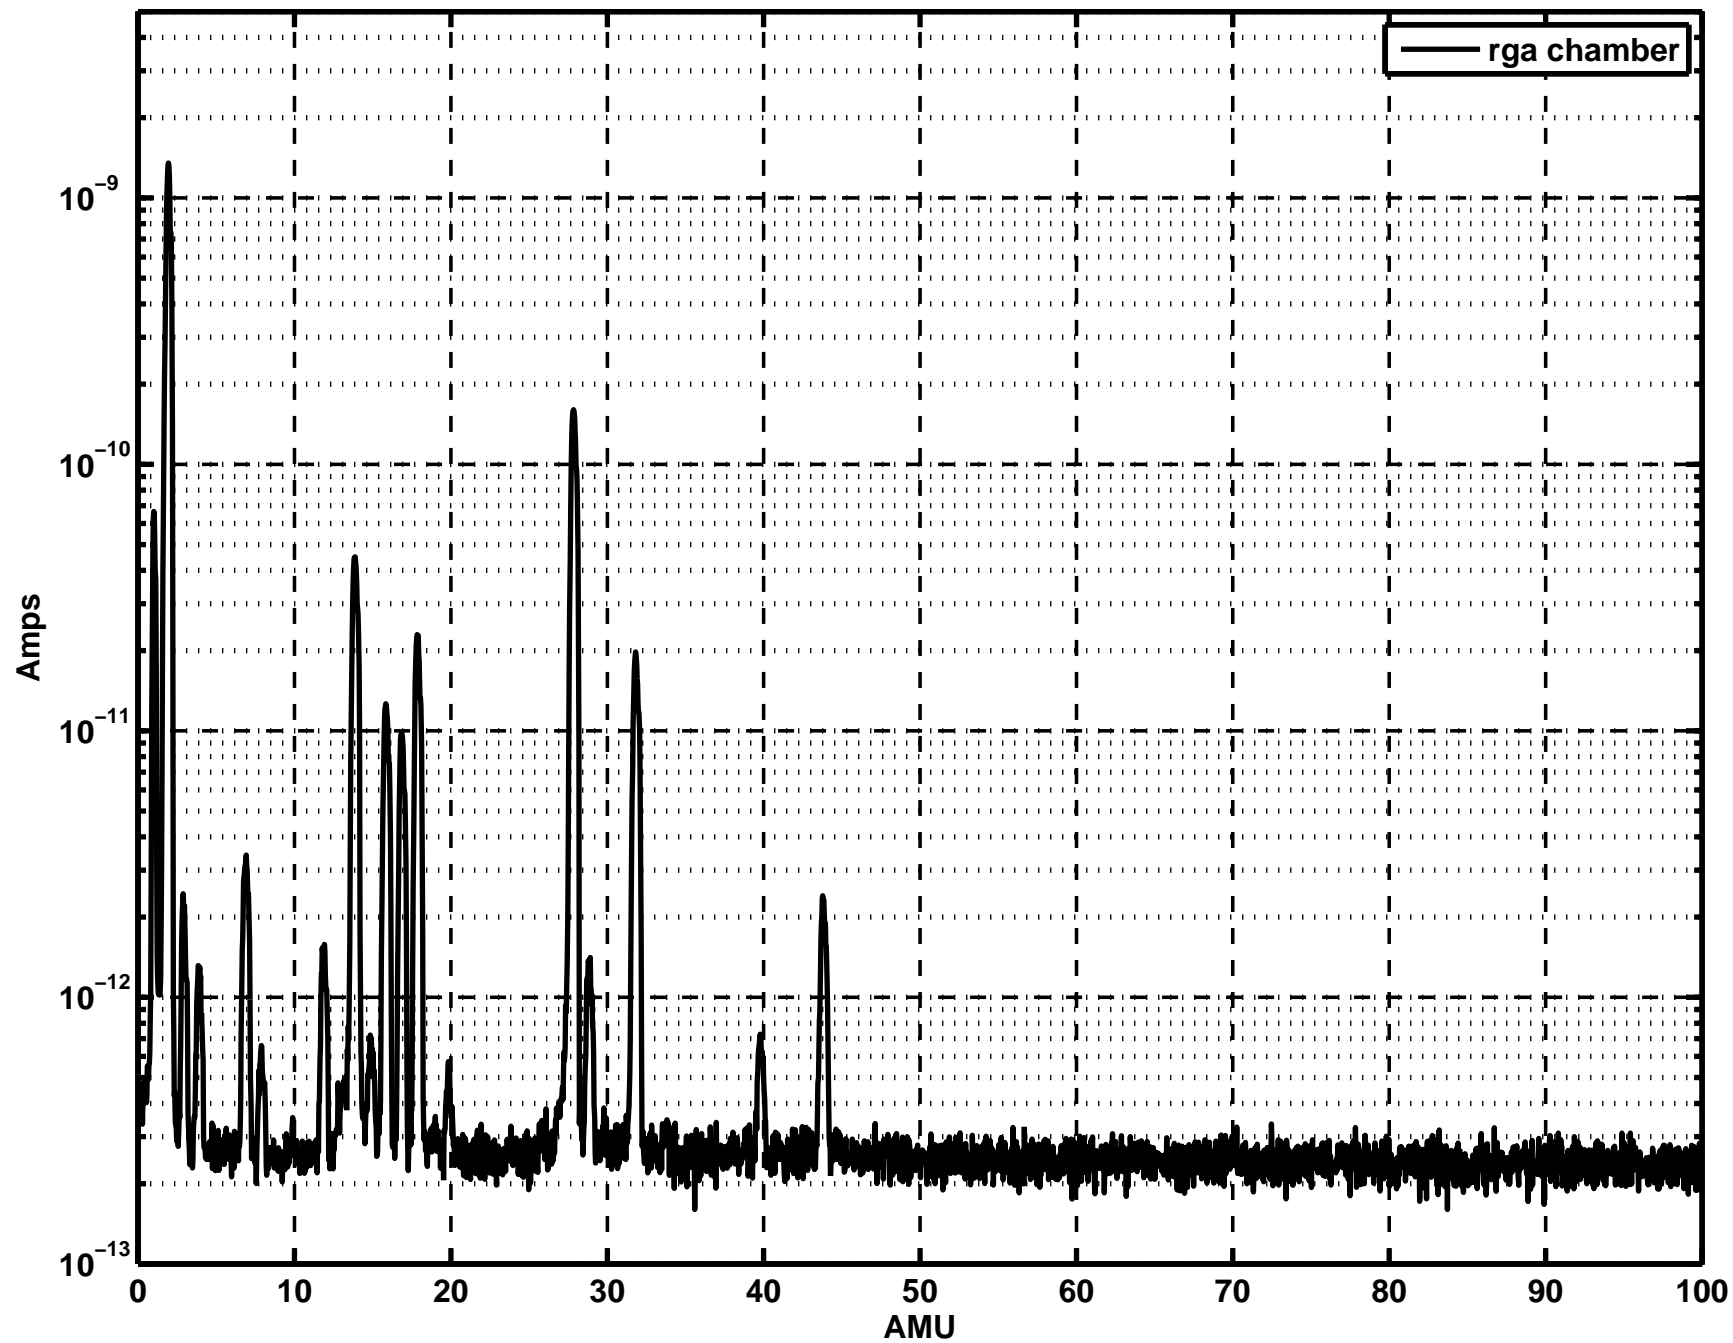

RGA+Oven Only

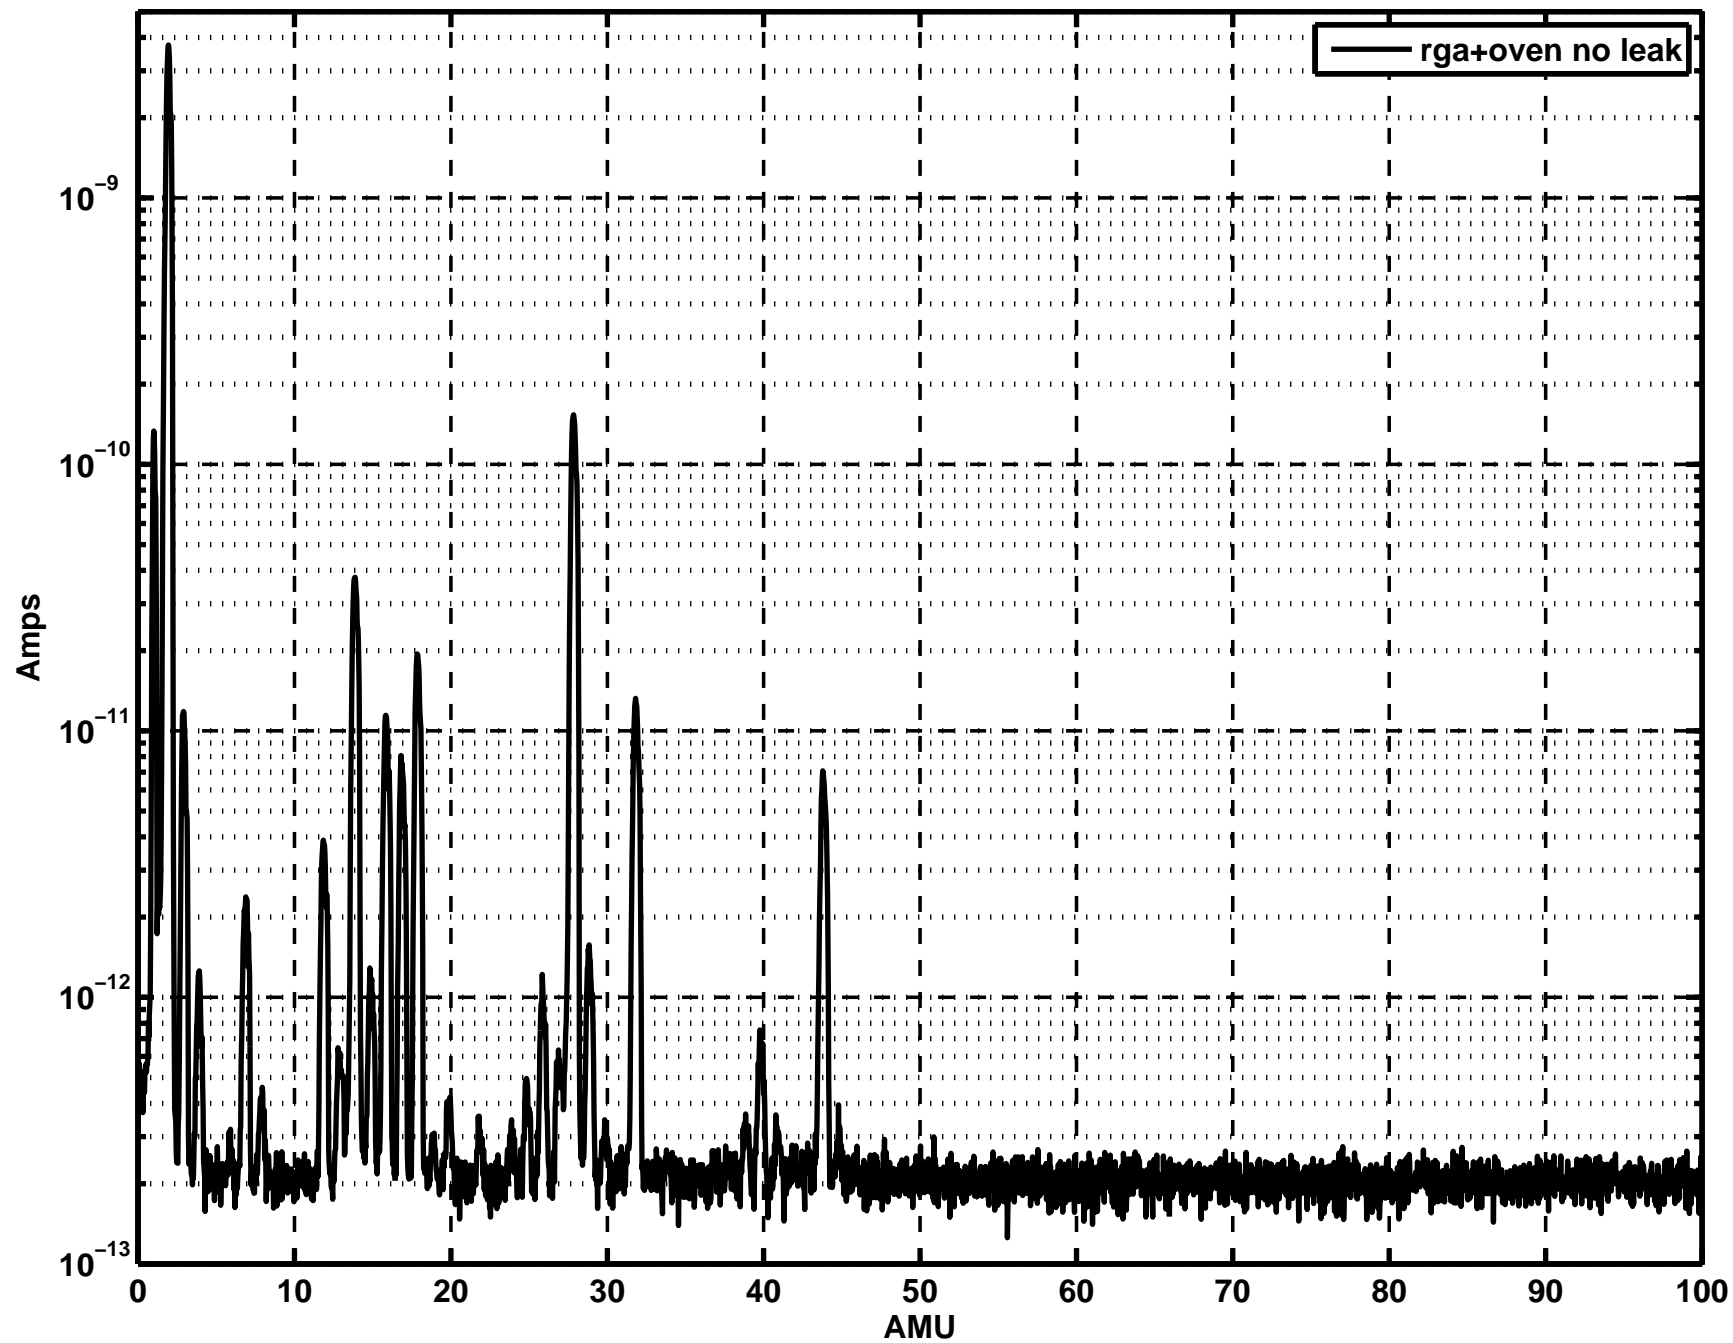

RGA of Oven Load with calibrated leak (main turbo valved off)

